




Canon PowerShot SD1200 IS LCD Replacement

This guide show how to remove the LCD from the Canon PowerShot SD1200 to facilitate replacement.

Written By: Jeff Casper

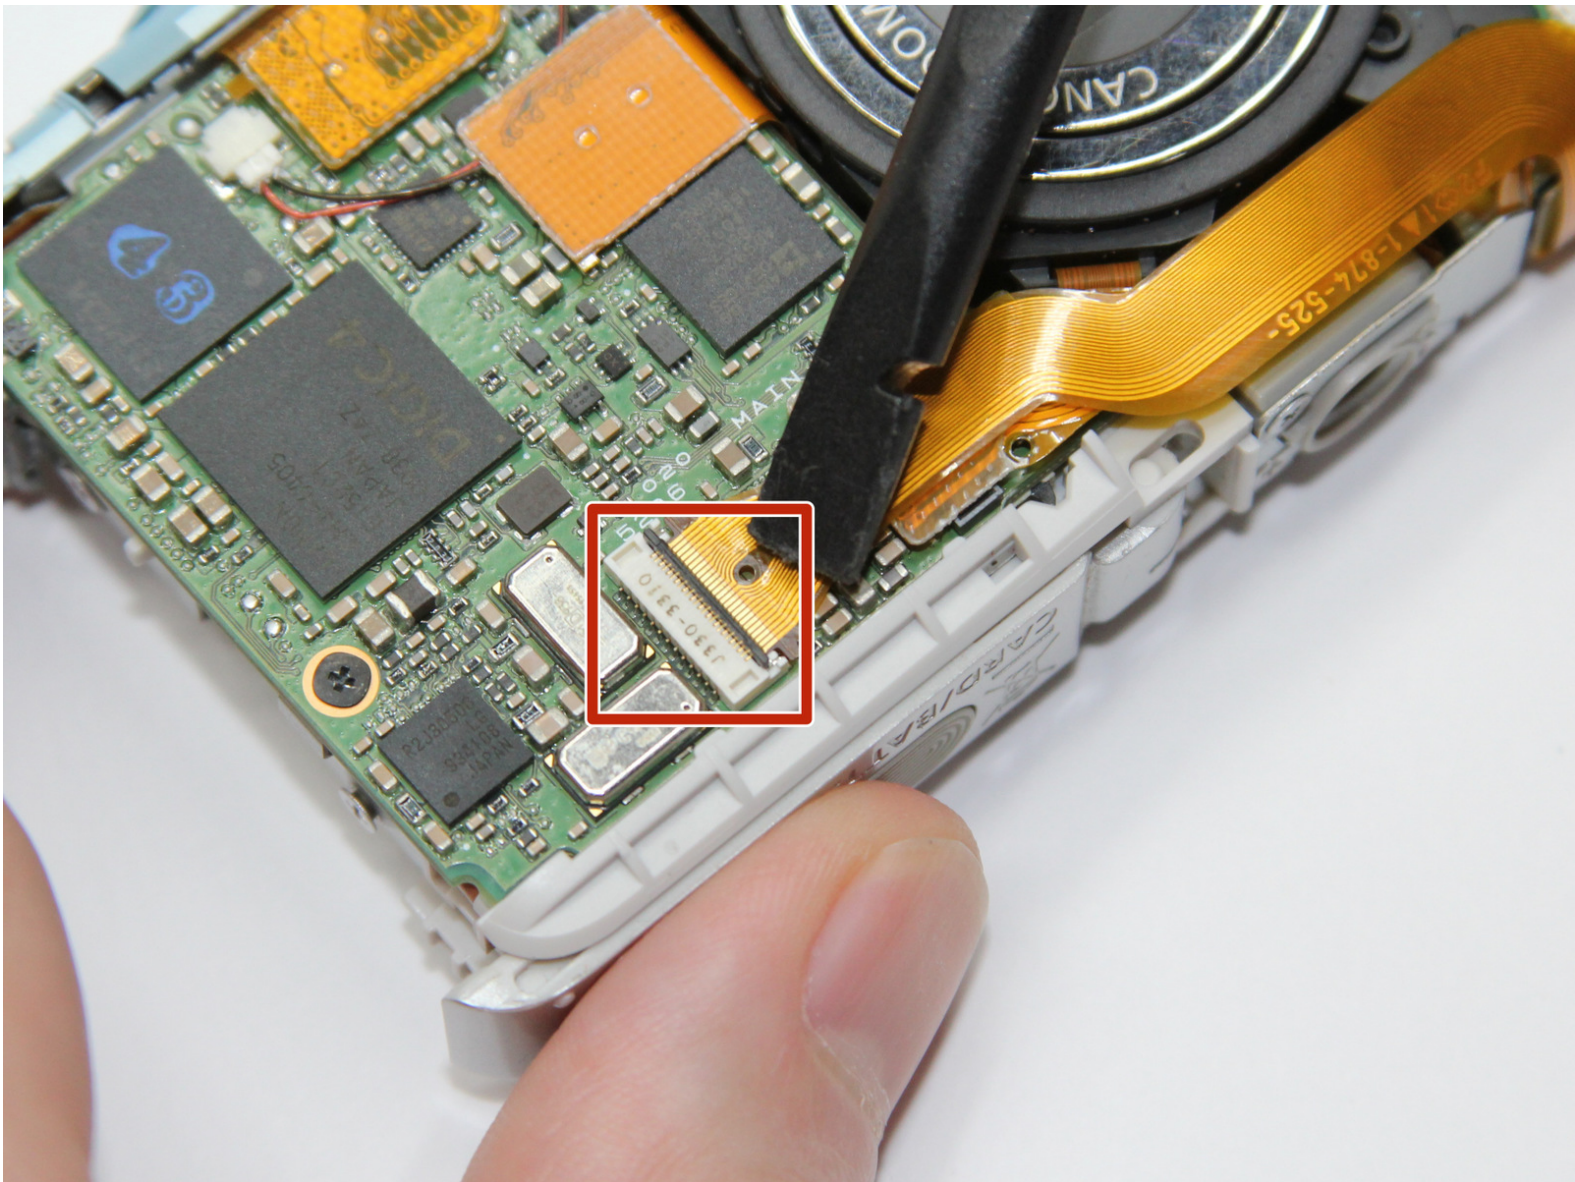

INTRODUCTION


Removing the LCD screen seems intimidating, but everything comes apart rather easily. You just have to lift tabs, remove a single screw and lift out the screen.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Front and Rear Covers

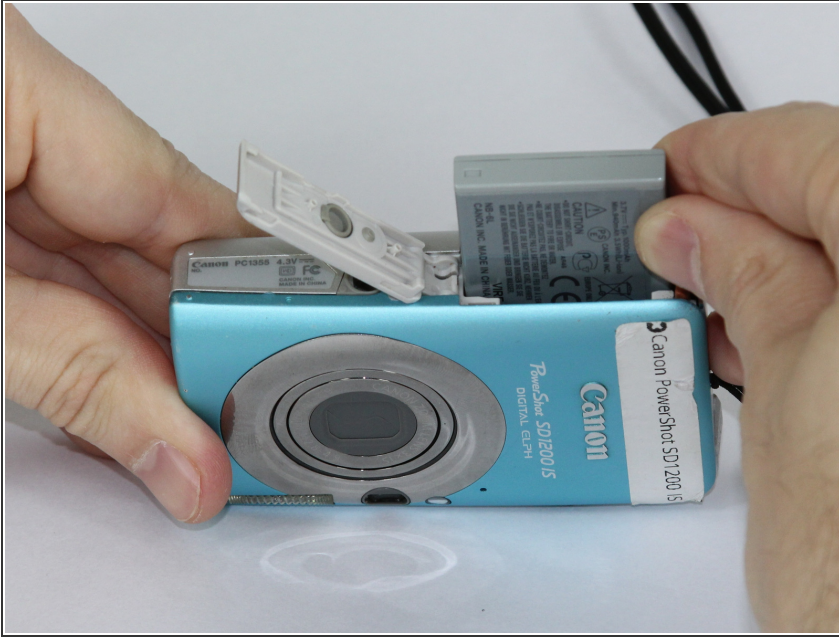

- Remove the battery.

Step 2

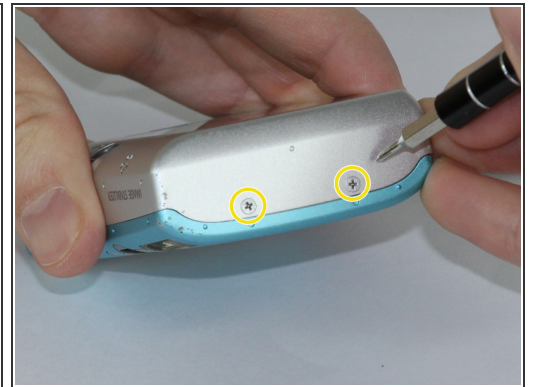

- Remove the two screws from the side of the camera casing with the strap. (4mm Phillips 00)
- Remove the two screws from the bottom of the camera. (4mm Phillips 00)
- Remove the two screws from the right side of the camera opposite the strap. (2mm Phillips 00)

Step 3



- Pull off the front cover.

i If the top of the cover sticks, use gentle downward pressure on the retention clips above the lens to release.


- Remove the back cover.

Step 4 — LCD



- Use the spudger to lift the retaining flap on the **Zero Insertion Force (ZIF)** tab securing the thick ribbon cable.
- Slide out the ribbon cable using fingers or tweezers.
- ⚠ Be sure you are prying up on the hinged retaining flap, not the connector.
- Using tweezers, disconnect the small ribbon cable below the flash assembly from the **No Fuss Connector** by simply pulling the ribbon cable straight out.

Step 5

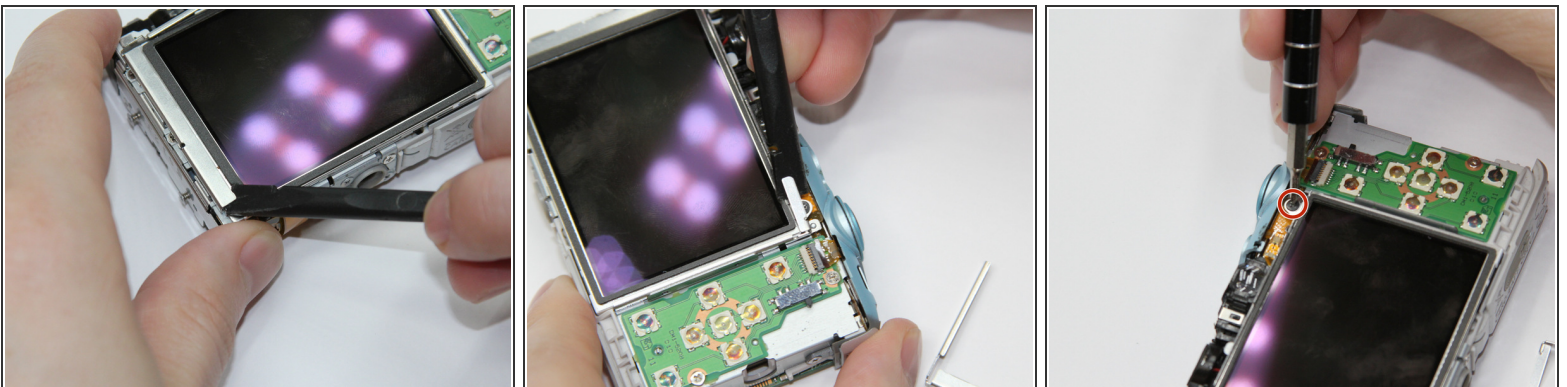

- Remove the L shaped brackets from the left and right side of the LCD screen with the spudger tool.
- ⓘ The Brackets have tabs that need to be pried up.
- Remove the screw below the shutter button. (2.5mm Phillips 00)
- Holding the sides of the LCD screen, lift the screen up and away to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 08:16:45 AM.